



Traction battery cooling circuit fluid

The traction battery storage units and the ECU (Electronic Control Unit) are cooled by a special fluid which is circulated by a pump.

Pump or fan noise may be heard while the vehicle is stationary.

TRACTION BATTERY



Traction battery water level

The battery must be topped up periodically. When topping up is required, the battery water level warning lamp comes on.

When this warning lamp comes on, proceed to an authorised dealer, who, alone, should top-up the battery level.

LIQUID UNDERNEATH THE VEHICLE

If the liquid originates from the traction battery, it could be dangerous.

Consult your dealer.

If it comes into contact with the skin, wash immediately with clean water.